HIQ Wife 2017

Color Touch Heating Thermostat

- This Thermostat is a digital thermostat, which is designed for electric floor heating system or water heating system. Using 4.3inch color touch LCD display, the working status can be easily understood. With built-in four languages, you can select the languages you want to display.
- With five modes, the system can work according to your desired pre-set temperature conveniently. And the 5+1+1 days programmable function, which is easy-to-program on/off settings per day.
- Simple regulation which sends On/Off commands to the heating system according to a pre-selected temperature variation. The thermostat control algorithm includes an anticipation function which reduces the discrepancy between the thermostat reading and the temperature at the centre of the room.
- Choose from three (3) sensor setting: Ambient (built-in sensor)-to control the air temperature; Floor to control the temperature using the floor probe; Ambient and Floor to control the ambient air, and show floor temperature by using the floor probe.

Product Features

- 4.3inch Color Touch Screen Operation
- Electric Heating System(Max.16A) or Water Heating System(Max.3A)
- Adjustable Comfort Mode, Economy Mode, Party Mode, Holiday Mode and Program Mode Control
- 5+1+1 Days Programmable
- · External and Internal Sensor Select
- · Four languages select: English, French, German, Dutch
- Clock and Date Display
- Temp. Clibration
- Temp. Protection
- 86*86mm mounting

Technical Data

- Voltage: 230V, 50/60Hz
- Load Current: 16A(Max)
- Temp. 5etting Range: 5~35℃
- Ambient: 0~50°C
- Sensor: NTC10K, 3950ohms at 25 ℃
- Accuracy: ± 0.5 °C
- · Protection Class: IP30

Screen and Display







| 1 | ON/OFF Button | Use to turn on/off Thermostat | |
|----|--------------------------------|--|--|
| 2 | Mode Button | Use to Choose Working Mode | |
| 3 | Menu Button | Use to Menu Settings | |
| 4 | Down Button | Decrease Temp. or other parameter setting | |
| 5 | Up Button | Increase Temp. or other parameter setting | |
| 6 | External Temp. | Show Floor Temp. | |
| 7 | Room Temp. | Show Actual Room Temp. | |
| 8 | Set Temp. | Range: 5-35℃ | |
| 9 | Room Temp. Icon | Room Temp. Icon | |
| 10 | Mode Icon | Show Current Working Mode | |
| 11 | Clock Icon | Show Current Time & Enter Parameter Setting | |
| 12 | Weekday Icon | Show Current Weekday | |
| 13 | Heating Icon | Will Show When in Heating | |
| 14 | Mode Icon | Show Current Working Mode | |
| 15 | Date &Time Button | Use to Set Weekday and Time | |
| 16 | PRG. Schedule Review Button | Use to Check 5+1+1 Days Programmable Schedule | |
| 17 | Mode Temp. Pre-set Button | Use to Pre-set Mode's Working Temp. | |
| 18 | Language Select Button | Use to Select English, French, German & Dutch Language | |
| 19 | Protection Temp. Set Button | Use to Set Over Protection Temp. & Low Protection Temp. | |
| 20 | Comfort Mode Button | Once Select, Thermostat Will Work According to Pre-set Temp. of Comfort Mode. | |
| 21 | Economy Mode Button | Once Select, Thermostat Will Work According to Pre-set Temp. of Economy Mode. | |
| 22 | Party Mode Button | Once Select, Thermostat Will Work According to Pre-set Temp. of Party Mode. | |
| 23 | Holiday Mode Button | Once Select, Thermostat Will Work According to Pre-set Temp. of Holiday Mode. | |
| 24 | PRG. Mode Button | Once Select, Thermostat Will Work According to Pre-set Temp. of 5+1+1 PRG.Mode. | |

Schedule Setting

Press Menus Button, press , then you can review weekly schedule. You can press the three columns to change the 5+1+1 events.



For example, if you want to edit Sat. schedule, you can press Sat. column, then you will enter the edit page as picture shows. Every setting can be finish by pressing or button.



- In Sun. column, there are six periods. You can press on button to choose the period you are going to change.
- Whichever period is selected, will display.

 2. After period is selected, you can set hour, minute and
- temperature by pressing and button.
- 3. After new schedule is set, pls. press "APPLY" to save the new schedule.

Edit Date and Time

Press Menu button, choose button to edit date and time by or button. After setting pls. press "APPLY" to save the changes.




Mode Pre-set Temp. Settings

Press Menu button, choose button to pre-set mode working temp. by and button. After setting, pls. press "APPLY" to save the changes.



Protection Settings

Press Menu then select 3 button to enter Protection Settings page. You can set High Protection temp. & Low Protection temp. by and

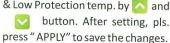



High Protection: It uses external sensor to probe floor temp. When floor temp. over set protection temp. the system will be shut off automatically.

Low Protection: It functions only when thermostat under OFF mode. It uses internal sensor to probe room temp. When room temp. below set protection temp, then the system will be shut on automatically.

Languages Select

Press Menu button, then select icon to enter languages page, after selecting the language you want, press "APPLY" to save it.




Parameter Settings


Within 3S after turning thermostat to OFF mode, press of for 2 seconds, then will enter parameter setting, you can set the desired value by pressing "<<" or ">>", and go to other pages by pressing "Pre" or "Next".

| Menu | Description | Range |
|------|---|-------------------------------|
| .01 | Temp. Offset | -8 °C ~8 °C |
| 02 | Dead Zone | 0°C ~3°C |
| 03 | Set Point Max. | 5 ℃ ~35℃ |
| 04 | Set Point Min. | 5 ℃ ~35℃ |
| 05 | NTC Select(Internal, External) | I only, E only, I & E, I or E |
| 06 | Low Protection Max. | 5 °C ~10°C |
| 07 | Low Protection Min. | 5 ℃ ~10℃ |
| 80 | High Protection Max. | 5 ℃ ~90℃ |
| 09 | High Protection Min. | 5 °C ~90°C |
| 10 | Backlight off Time after Operation. | 3s-180s |
| 11 | Min. Backlight Brightness of Standby Status | 1%~100% |
| 12 | Relay Delay Time | 0s~250s |
| 13 | Relay Output | Normal(NO); Inverted(NC |
| 14 | Restore | |

Wiring Diagrams

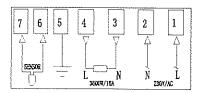

Electric Heating System

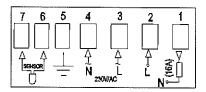

Voltage-Free System




Water Heating System

Note:


One wiring diagram for one kind thermostat only, please wire according to thermostat back print. For example if you get a electing heating thermostat can't wire as water heating wiring diagram. Reverse the same!

Installation

Using a screw driver to open the upper and lower body part, then connect the wiring to terminals tightly, then fix the lower body part into wall with attached screws.

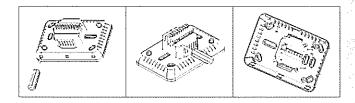

Dimension (mm)

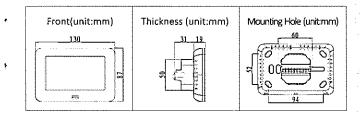

IQ wifi thermostat Set up instructions for Apple (IOS) and Android Devices. Heat IQ

Apple I Phone Download the E Thermostat app from the App store _ Note you will reqire IOS 8.0 or later


Android Enter this link on your web browser https://www.pgyer.com/mE41 to download and install the E thermostat the


Important before you begin

- * Ensure your device is connnected to your (to be used with this thermostat) wifi network and not to a mobile network.
- * Go to your e mail system and set up no-reply@account1.danale.com As a safe sender





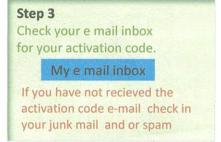

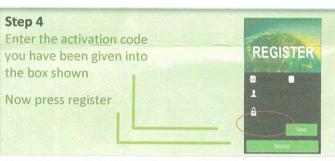























Your done!

Thanyou for purchasing an IQ wifi Thermostat

discover more at wifithermostat.co.nz

Tradepoint LTD (HeatIQ) 11 Rakau Road Wanganui New Zealand WWW.wifithermostat.co.nz - sales@ heatiq.co.nz - 0064 6



